

VIZIO



CINEMAWIDE™ THEATER 3D™ HDTV  
WITH VIZIO INTERNET APPS®

MODELS XVT3D500CM • XVT3D580CM

**QUICK START GUIDE**

# PACKAGE CONTENTS



VIZIO CinemaWide Theater 3D HDTV with Stand




Remote Control  
with Batteries



Basic Theater 3D  
Glasses (2 pairs)



Premium Theater 3D  
Glasses (2 pairs)

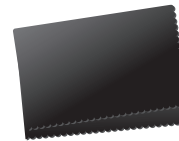

Cleaning Cloth




Quick Start Guide and  
User Manual



# INSTALLING THE BASE

 1



x6

Place the TV screen-down on a clean, flat surface. To prevent scratches or damage to the screen, place the TV on a soft surface, such as carpet, rug, or blanket.

Tighten the six (6) thumbscrews into the base.

2



Place the TV on a stable, level surface.

# USING THE REMOTE

## INPUT

Change the currently-displayed input.

## A/V CONTROLS

Control USB photo slideshow and V.I.A. apps.

## CLOSED CAPTIONS

Open the closed caption menu

## EXIT

Close the on-screen menu.

## BACK

Go to the previous on-screen menu

## V.I.A. SHORTCUT BUTTONS

Control VIZIO Internet Apps.

## VOLUME UP/DOWN

Increase or decrease loudness of the TV audio.

## MUTE


Turn the sound off or on.

## NUMBER PAD

Manually enter a channel.

## 3D

Change the 3D mode.

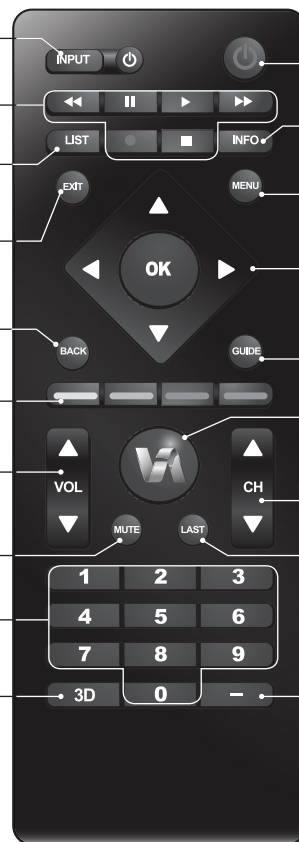

## POWER

Turn TV on or off.

## INFO

Display the info window.

## MENU

Display the on-screen menu.

## ARROW

Navigate the on-screen menu.

## GUIDE

Display the info window.

## V.I.A.

Open the VIZIO Internet Apps dock.

## CHANNEL UP/DOWN

Change the channel.

## LAST

Return to the channel last viewed.

## DASH

Use with number pad to manually enter a digital sub-channel. (For example, 18-4 or 18-5.)



## SLIDE OUT REMOTE



### ARROW

Navigate the on-screen menu.

### SHIFT

Press and hold while pressing another key to enter a capital letter.

### ALT


Press and hold while pressing another key to enter a blue character. For example, press **ALT** and **S** to enter a **#** character.

### V.I.A. SHORTCUT BUTTONS

Control VIZIO Internet Apps

# FIRST-TIME SETUP

1

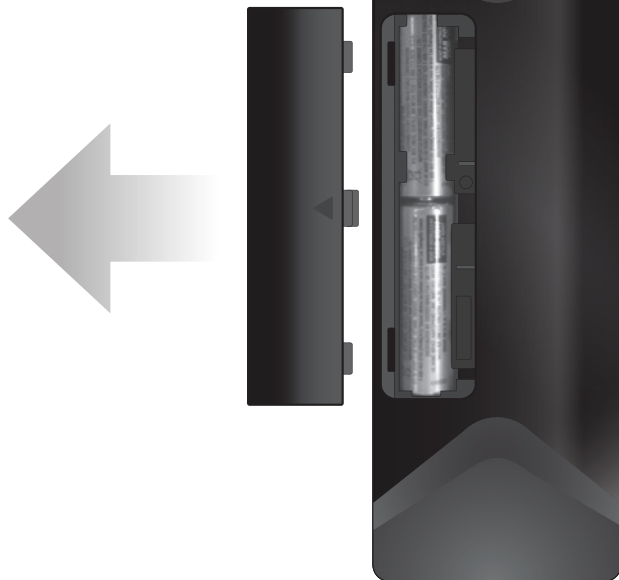


Remove the battery cover by pressing gently on the arrow and sliding away from the remote.

Insert the included batteries.

Gently slide the battery cover back into place.


2

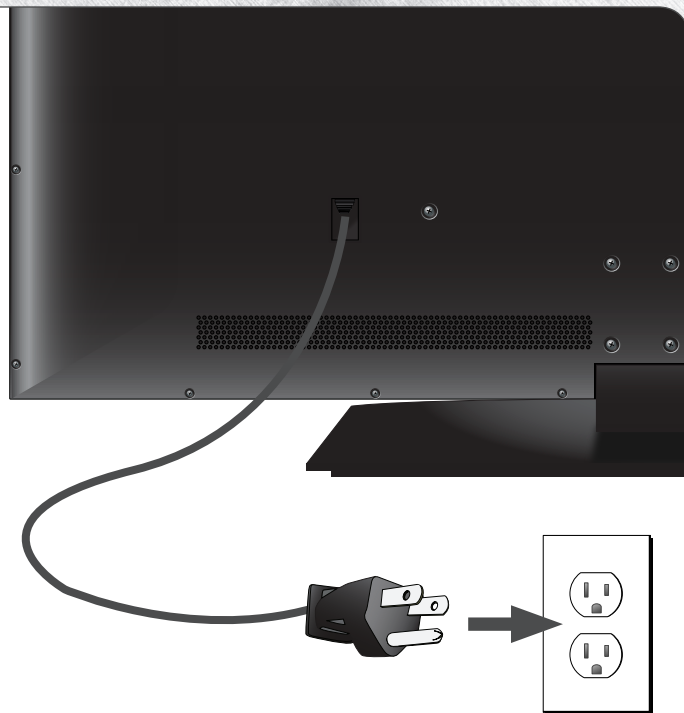


Plug the power cord into an electrical outlet.



# 3

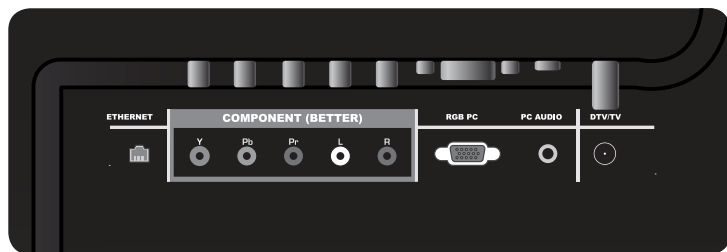

Ethernet  
Cable

 

Coaxial  
Cable

If you have an external antenna or a cable connection that extends from a wall outlet, connect it to the TV with an RF/Coaxial cable.

If you have a high-speed internet connection, connect an Ethernet cable from your modem or router to the back of the TV as shown.

# 4




Turn the TV on by pressing the **Power** button on the remote.

The Setup App is displayed.

Use the **Arrow** buttons on the remote to highlight **Home Mode Setup** and press **OK**.

# 5

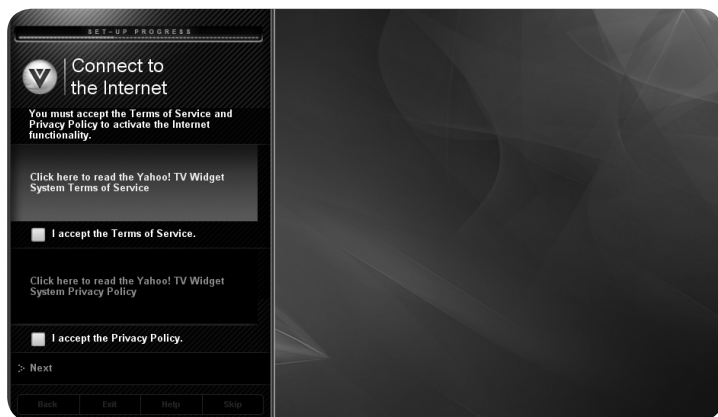

Use the **OK** and **Arrow Up/Down** buttons on the remote to read and accept the Terms of Service and Privacy Policy for Yahoo! TV Widgets.

When you are finished, highlight **Next** and press **OK**.

# 6




Select the name of your wireless network from the list of available networks and press **OK**.

Enter your network key using the on-screen keyboard, then highlight **Connect** and press **OK**.




# 7

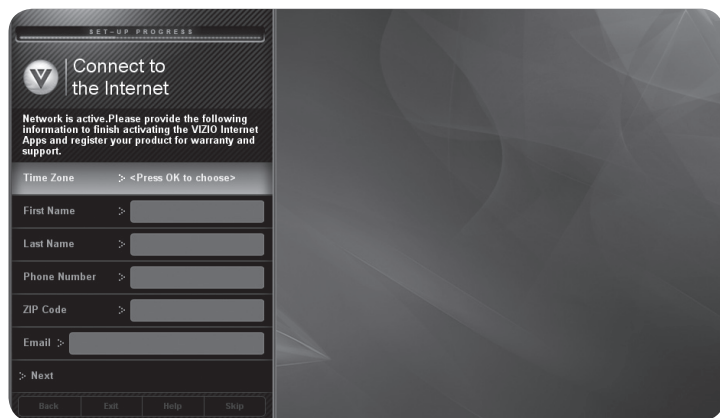

Enter your First Name, Last Name, Phone Number, ZIP Code, and E-mail Address using the on-screen keyboard.

Highlight **Next** and press **OK**.

# 8

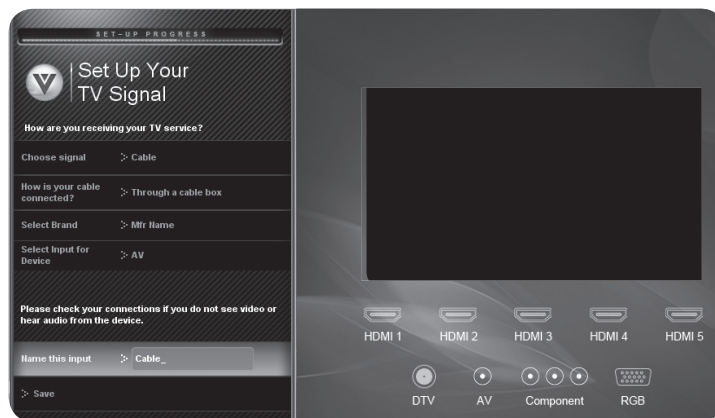

Answer the on-screen questions about your TV connection using the **Arrow** and **OK** buttons on the remote.

When you have finished the channel scan, highlight **Exit to Live TV** and press **OK**.


The First-Time Setup is complete.

# CONNECTING YOUR DEVICES

BACK OF TV

Match colored  
connectors  
to colored ports.

Match colored  
connectors  
to colored ports.

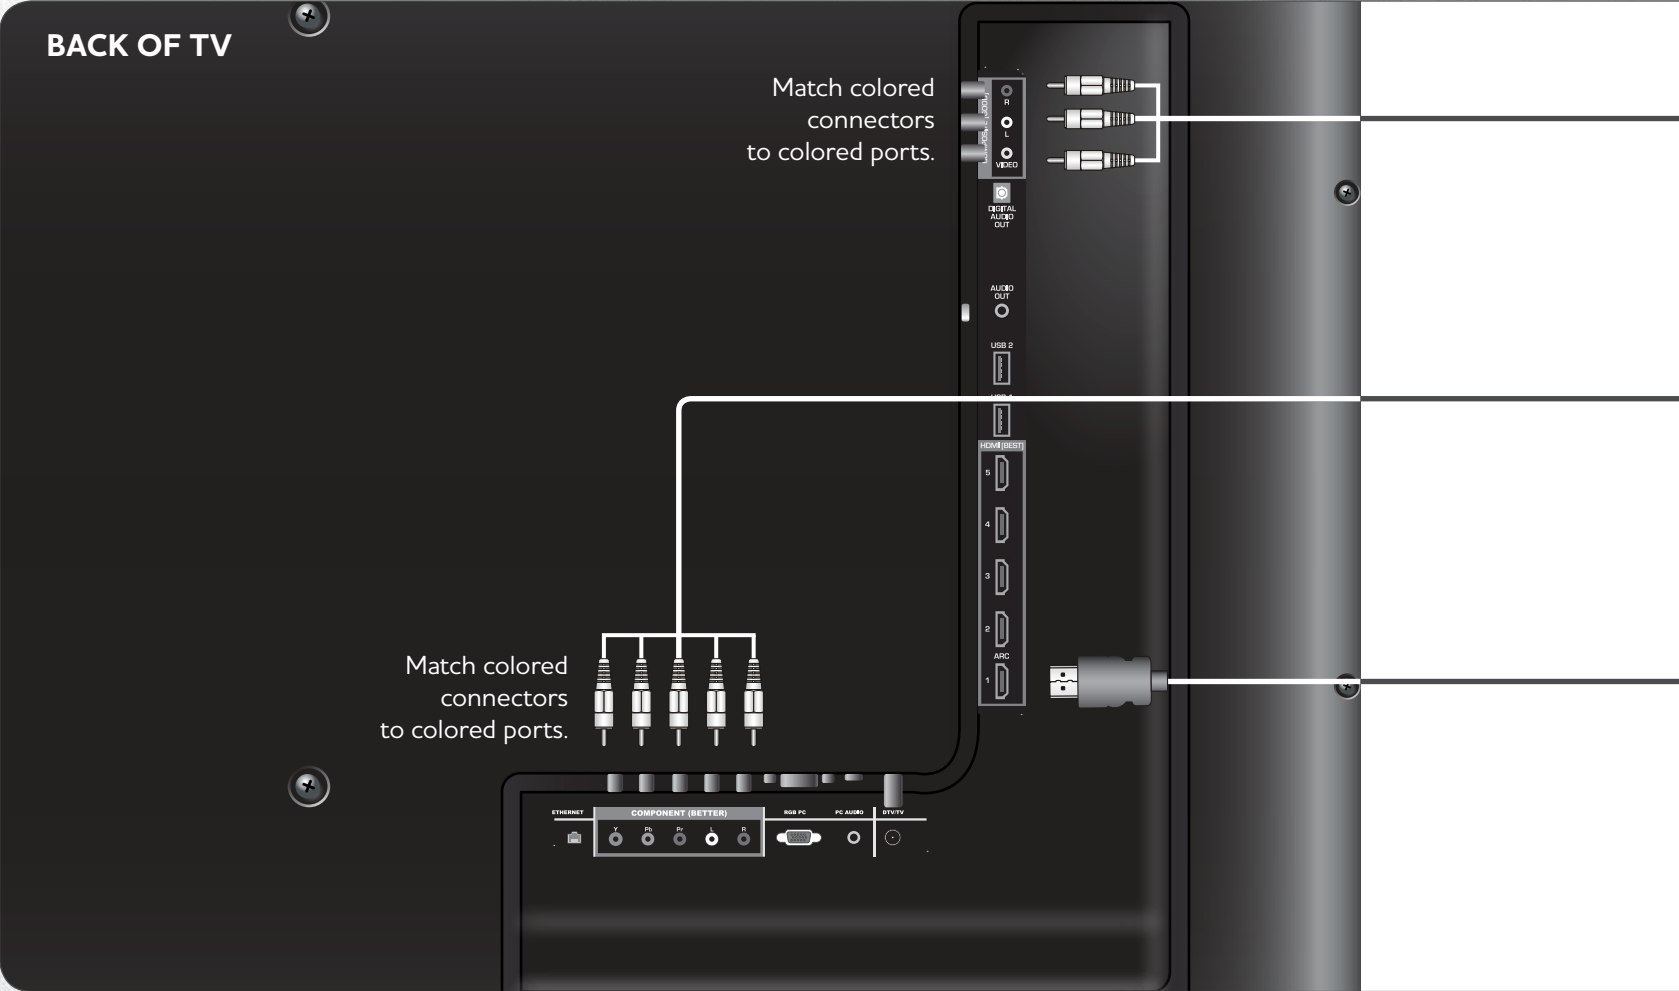




Choose **ONE** connection type for each device.  
(Cables are not included.)


AV CABLE

**GOOD**

- ANALOG
- VIDEO (480i)\*
- STEREO AUDIO

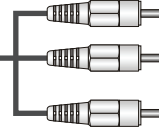

Match colored  
connectors  
to colored ports.

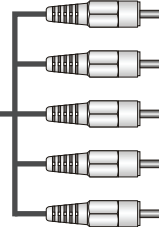

COMPONENT CABLE

**BETTER**

- ANALOG
- HD VIDEO (1080p)\*
- STEREO AUDIO

HDMI CABLE

**BEST**

- DIGITAL
- HD VIDEO (1080p)\*
- HD AUDIO



Commonly-connected  
devices:



Cable or Satellite Boxes



Blu-ray™ or DVD Players



Game Consoles

\* Maximum Resolution

# WATCHING CINEMAWIDE



Standard 16:9  
Screen



VIZIO CinemaWide 21:9  
Screen

Because a 21:9 screen is 30% wider than standard 16:9 screens, your CinemaWide HDTV allows you to view a widescreen movie without the black bars on the top and bottom of the screen.

- When the movie starts playing, press the **WIDE** button on the remote, then select **Automatic**. Your CinemaWide HDTV will automatically fit the movie to the wide screen.
- For the best CinemaWide picture, watch Blu-ray discs that have been filmed at a **21:9 (2.35) aspect ratio**. This information can usually be found on the back of the Blu-ray disc case.



# MULTITASKING

Thanks to the CinemaWide screen, you can take advantage of VIZIO Internet Apps while watching your favorite TV or movies.

Great ways to use multitasking:

- Keep track of league scores while watching your favorite team.
- Read the latest headlines while commercials are playing.
- Update your status on Facebook® while you watch a new Blu-ray.



However you decide to use multitasking, you can rest assured you won't miss a thing.

Your CinemaWide screen has enough room for it all!

# GETTING STARTED WITH VIZIO INTERNET APPS

## 1



**V.I.A.**  
Press this button to  
open the V.I.A. Dock.

Be sure your TV is connected to the Internet.  
Use an Ethernet cable or connect wirelessly.

For the best V.I.A. experience, a high-speed  
Internet connection is recommended.

## 2



The V.I.A Dock is displayed on the bottom of the screen.


Use the **Arrow** buttons on the remote to highlight an  
app, then press **OK** to open it.

# 3


Your V.I.A Dock has many popular apps pre-loaded, but you can add more at any time. To discover and add new apps to the Dock, open the **Widget Gallery** app.



Highlight **Categories** and press **OK**.

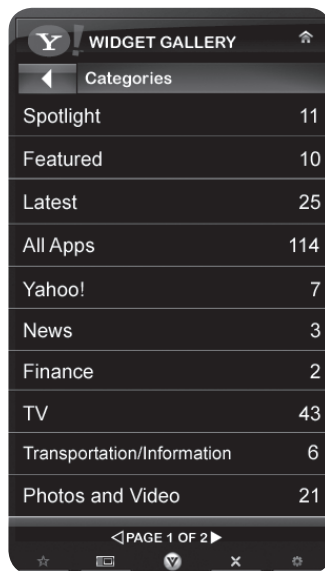

A list of app categories is displayed. Select a category and browse through the available apps.

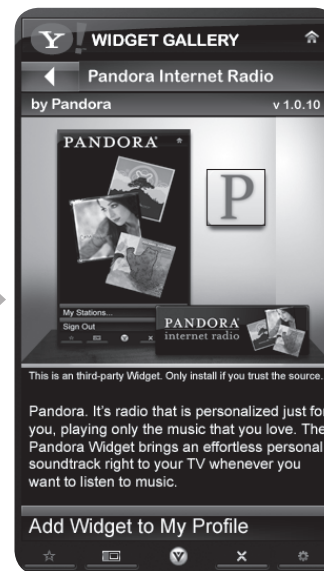

When you've found an app you want to add to the Dock, highlight **Add Widget to My Profile** and press **OK**.



# HOW TO VIEW 3D


## 1



You will need:

- 3D Blu-ray™ player\*
- Blu-ray 3D™ disc\*
- VIZIO Theater 3D Glasses
- 3D-ready HDMI cable connecting the 3D Blu-ray player to your 3D HDTV\*

## 2

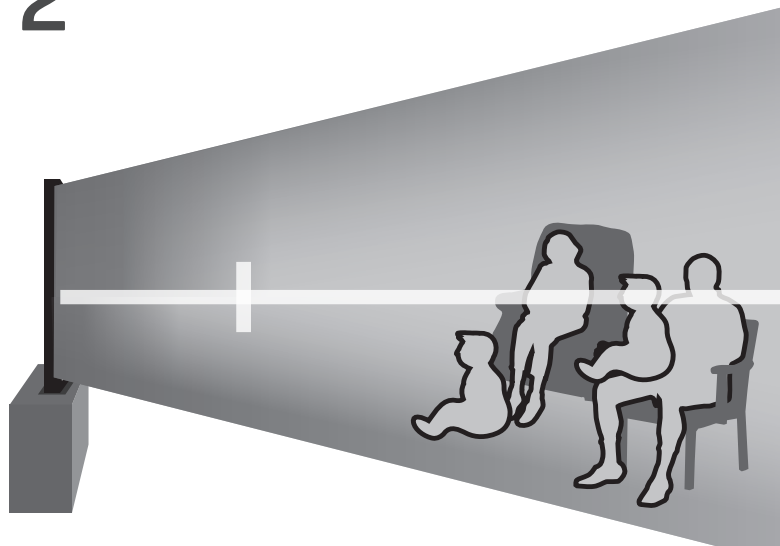

For the best 3D experience:

- Try to view the TV straight-on, as shown above.
- Do not view the TV at an extreme angle. Some of the 3D effect will be lost.
- Sit at least **9 feet** from the TV.

# COMPLETE THE 3D EXPERIENCE

## VIZIO 3D Blu-ray™ Player with Wireless Internet Apps

Whether you're looking to bring home an intense 3D movie experience, 1080p Full HD, or dive into online entertainment, this player delivers.



### VIZIO High Speed HDMI Cables

To view 3D or 1080p Full HD content from your 3D Blu-ray player, you'll need to connect it with an HDMI cable. VIZIO HDMI cables feature a slim design for easy installation.

### VIZIO Theater 3D Glasses

No matter how many guests you're entertaining, you can share your new 3D world with friends and family. These 3D glasses are lightweight, comfortable, and battery-free.

AVAILABLE AT [VIZIO.COM](http://VIZIO.COM)

DO YOU HAVE QUESTIONS?

# LET US HELP!

**YOUR PRODUCT INCLUDES FREE LIFETIME TECH SUPPORT**



The VIZIO support team is highly trained and is based in the United States.

We can help with:

- New Product Setup
- Connecting Your Devices
- Technical Problems
- And More

**Phone:** (877) 878-4946 (TOLL-FREE)

**Email:** [techsupport@VIZIO.com](mailto:techsupport@VIZIO.com)

**Web:** [www.VIZIO.com/support](http://www.VIZIO.com/support)

**Hours of operation:**

Monday - Friday: 5 AM TO 9 PM (PST)

Saturday - Sunday: 8 AM TO 4 PM (PST)

**We speak English • Se habla Español • Nous parlons Français**



# HELP TOPICS

How do I return to the Setup App?

- The on-screen menu has guided setup. Press **MENU**, then select **HELP > Guided Setup**. Select the type of setup you need and press **OK**. The Setup App will begin.
- To reset the TV to factory defaults, press **MENU > HELP > Reset TV Settings**. Select **Yes**. Remember that all of your settings will be lost!

There is a picture, but there is no sound.

- Press the **VOLUME UP** button on the remote or on the side of the TV.
- Press the **MUTE** button on the remote to ensure that mute is off.
- Press **MENU**, then select **TV Settings > Audio**. Be sure TV Speakers is set to **ON**.

The TV displays “No Signal.”

- Be sure your connected devices are turned on.
- Press the **INPUT** button on the remote and select the input to which your device is connected (HDMI-1, Composite, Component, etc).

There are black/gray bars on the top/bottom/sides of the screen.

- Note that some television channels add black bars to the picture.
- Set the TV to Wide or Zoom mode. Press **MENU**, then select **Wide**. Highlight **Wide** or **Zoom** and press **OK**.
- Adjust the video settings of your external device

There is no power.

- Be sure the power cord is securely connected to the AC socket on the TV and to a working electrical outlet.
- Press the **POWER** button on the remote or on the side of the TV.
- If the above steps do not work, try plugging the power cord into a different outlet.



ENTERTAINMENT  
FREEDOM  
FOR ALL

© 2011 VIZIO INC. ALL RIGHTS RESERVED.

110810ST-NC